

SPOOL RACK

ASSEMBLY

WW7401



PARTS

- 2X bases
- 2X uprights
- 1X bottom brace
- 1X center pivot
- 1X top brace
- 10X spool rods
- 10X #8 x 1" Phillips flat head sheet metal screws
- 8X 1/4-20 barrel nuts
- 2X 1/4-20 x 3-1/2" Phillips truss head machine screws
- 2X 1/4-20 x 2-1/2" Phillips truss head machine screws
- 4X 1/4-20 x 1-3/4" Phillips truss head machine screws

TOOLS REQUIRED

- #2 Phillips screwdriver



barrel nut



Phillips flat head sheet metal screw



Phillips truss head machine screw

ASSEMBLY

1. Assemble the center pivot: Install 10 spool rods through the center pivot; if they will not slide in easily, rub the rods on a bar of soap. When the rods extend evenly on both sides of the pivot, secure each with a #8 x 1" Phillips flat head sheet metal screw, inserted through the countersunk hole in the pivot.

2. Assemble the bases and uprights: On a work surface, lay out a base and an upright with two holes at the top and one hole at the bottom, as shown in the figure below. Insert a 1/4-20 x barrel nut into the hole at the bottom of the upright. Insert a 1/4-20 x 3-1/2" Phillips truss head machine screw through the base from underneath. Tighten the machine screw into the barrel nut. Repeat with the remaining base and leg.


3. Attach the bottom brace: Orient the bottom brace with its notch facing up and its holes aligned with the empty holes in

the bases. Insert a 1/4-20 x barrel nut into each hole in the bottom brace. From the outer side of a base, insert a 1/4-20 x 2-1/2" Phillips truss head machine screw into the barrel nut and tighten. Repeat with the remaining base at the other end of the bottom brace.

4. Set the center pivot into the groove in the bottom brace. Place the top brace, logo side up, over the center pivot, fitting the center pivot into the hole in the top brace.

5. Insert two 1/4-20 x barrel nuts into the holes at the top of an upright. From the upper side of the top brace, insert two 1/4-20 x 1-3/4" Phillips truss head machine screws into each barrel nut and tighten. Repeat with the remaining upright at the other end of the top brace.

Your spool rack is now fully assembled. To turn the center pivot, lift it out of the notch in the bottom brace. To lock the center pivot, fit it into the notch in the bottom brace.

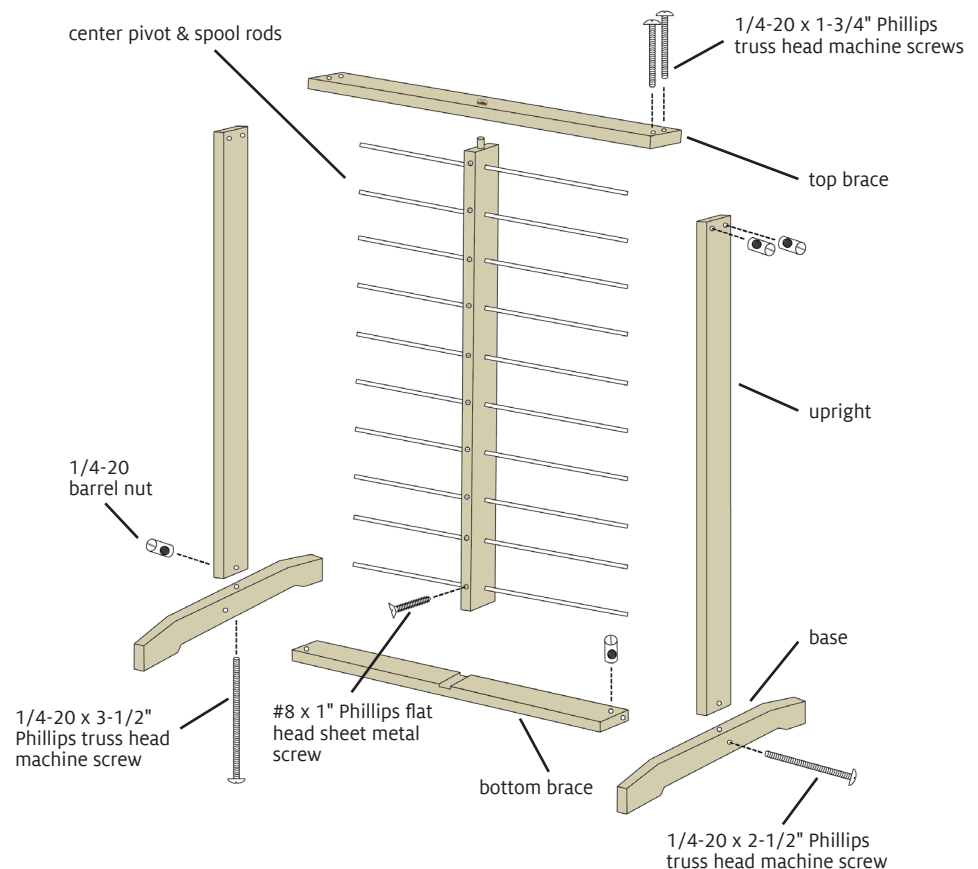

Find out more at schachtspindle.com
Schacht Spindle Company 6101 Ben Place Boulder, CO 80301
303.442.3212

© 2024 Schacht Spindle Company, Inc.